

TOWABLE GRILL INSTRUCTIONS

How To Use as a Grill Only

1. Cooking grate needs to be transported in lower position. Rods stored in drain pan at rear of unit while transporting.
2. To raise grate into grilling position, remove grate from unit.
3. Remove 3 rods from drain pan.
4. Insert rods into slots, and place grate on top.

How To Light

1. Purge tanks -- open both tanks fully.
2. Open lid, making sure latch is secured in slot. Keep lid open while lighting.
3. Ensure BOTH blue gate valves are in "off" position (in line with pipe is the "on" position).
4. Push and hold down red button on safety valve. PUSH black igniter button until pilot lights while holding down red button. Continue holding red button for approximately 15 seconds after pilot lights.
5. If pilot light goes out, repeat step 4.
6. Use blue gate valves on each burner to adjust temperature & flame.
7. If windy, position back of grill towards the wind.
8. Once grill is burning properly, close lid and set to desired temperature.

Important Information

- Tanks must be shut off to turn pilot off.
- To achieve "low" temperature, only use one burner.
- Two tanks will burn approximately 7 to 8 hours.

Troubleshooting

If grill burns for awhile and then shuts down, there is too much gas pressure. Lower blue gate valves. Do NOT adjust gas flow at propane tanks. Propane tanks are meant to be completely on or completely off.

Cleaning Instructions

To avoid additional cleaning fees, unit must be returned clean.

1. Remove cooking grate and drip shield above burners. Use degreaser if necessary on drip shields.
2. Spray vegetable oil on screen to prevent rusting.
3. Remove drip pan to clean up.
4. Return rods to drip pan and lower grate for transport.



Abbott Rental Service
502 Union St, Littleton, NH
603-444-6557

